



BBQ Pellets Plus

Flame Torch to Butane Cartridge Installation

1. Remove Flame Torch from packaging and ensure grey valve is completely closed by gently rotating clockwise:



2. Remove dust cap from the Rim Vent Release Butane Cartridge:



3. Align the black key on the Flame Torch with the slot on the Butane Cartridge:



4. Press the Flame Torch down onto the Butane Cartridge and gently rotate the white body of the Flame Torch clockwise to connect the two:



5. To ignite the Flame Torch, ensure the nozzle is pointed in a safe direction, rotate the grey valve counter-clockwise until you can hear a small amount of gas flowing and then squeeze the trigger:



6. To turn off, simply rotate the grey valve clockwise until the gas stops flowing and the flame is extinguished:

