



BBQ Pellets Plus

Stabiliser Tray Installation – Weber SmokeFire EX4 / EX6



WARNING - Do not store flammable items on stabiliser tray while BBQ is in use

1. Place a piece of cardboard or something soft underneath the BBQ so that the tray coating doesn't get damaged:




2. Loosen the hex cap screws on all 4 legs by about ½ a turn using a 5/32" or 4mm Allen key. This will assist later with the alignment of the bolts when installing the tray.




3. Prepare the 4 x bolts and washers by sliding the spring washer onto the bolt first, then flat washer followed by the nylon washer:



4. Rest the tray on an angle and screw in by hand two of the bolts into the two right hand legs:

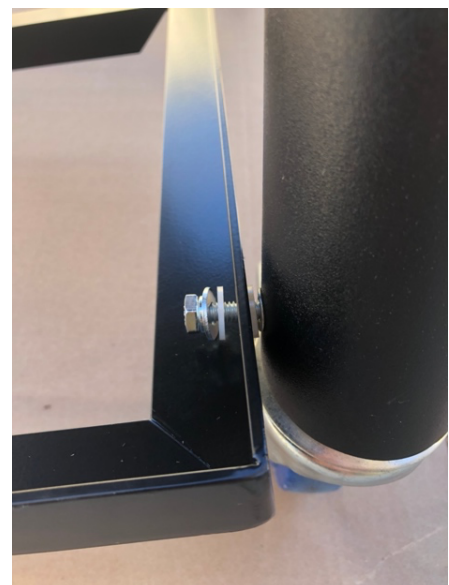

5. Prepare the 2 remaining bolts and washers, then lift the tray up and screw the bolts in by hand into the other two legs:

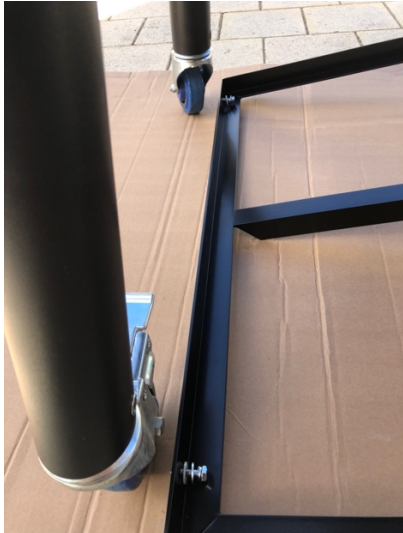

6. Once all bolts have been screwed in by hand, tighten all 4 bolts using a 7/16" or 11mm socket or spanner until the spring washer has been compressed. Do not overtighten otherwise the nylon washer will split, and you could damage the thread:



7. Re-tighten all 8 of the hex cap screws on the legs using a 5/32" or 4mm allen key:



8. Slide in the perforated tray so that it fits nicely under the bolt heads. You may need to slightly curve the front of the perforated tray upwards in the middle for it to fit it below the front bolt heads:



Done!!

